



TBOSS-LEG INSTALL GUIDE

Installation of TBOSS-LEG (Rear Supports for HD Applications)

The TRUCKBOSS LEG KIT can be installed during or after any TRUCKBOSS Deck installation.

The TBOSS-LEG is unobtrusive and does not encroach into any cargo space.

The TBOSS-LEG kit is only required at the rear of the deck; however can also be installed at the front.




Your TBOSS-LEG Kit will contain the following parts:

TBOSS-LEG KIT

2X	RAIL-ANGLE BRACKET
2X	17" LEG
2X	FOOT BRACKET
16X	5/16 X 0.75 CARRIAGE BOLT
16X	5/16 SERRATED FLANGE NUT
4X	TEK SCREWS

1. The FOOT BRACKET is adjustable for multiple truck box depths. The FOOT BRACKET needs to rest on a solid surface, spray-in liners or wooden liners are acceptable—plastic liners are not. If a plastic liner is present, install LEG Kit then remove portion of plastic liner from underneath foot.
2. Assemble each LEG as shown below using 4 of the 8 available bolt holes in the FOOT BRACKET (hole choice is dependent upon truck-box depth). Finger-tightening each SERRATED FLANGE NUT:

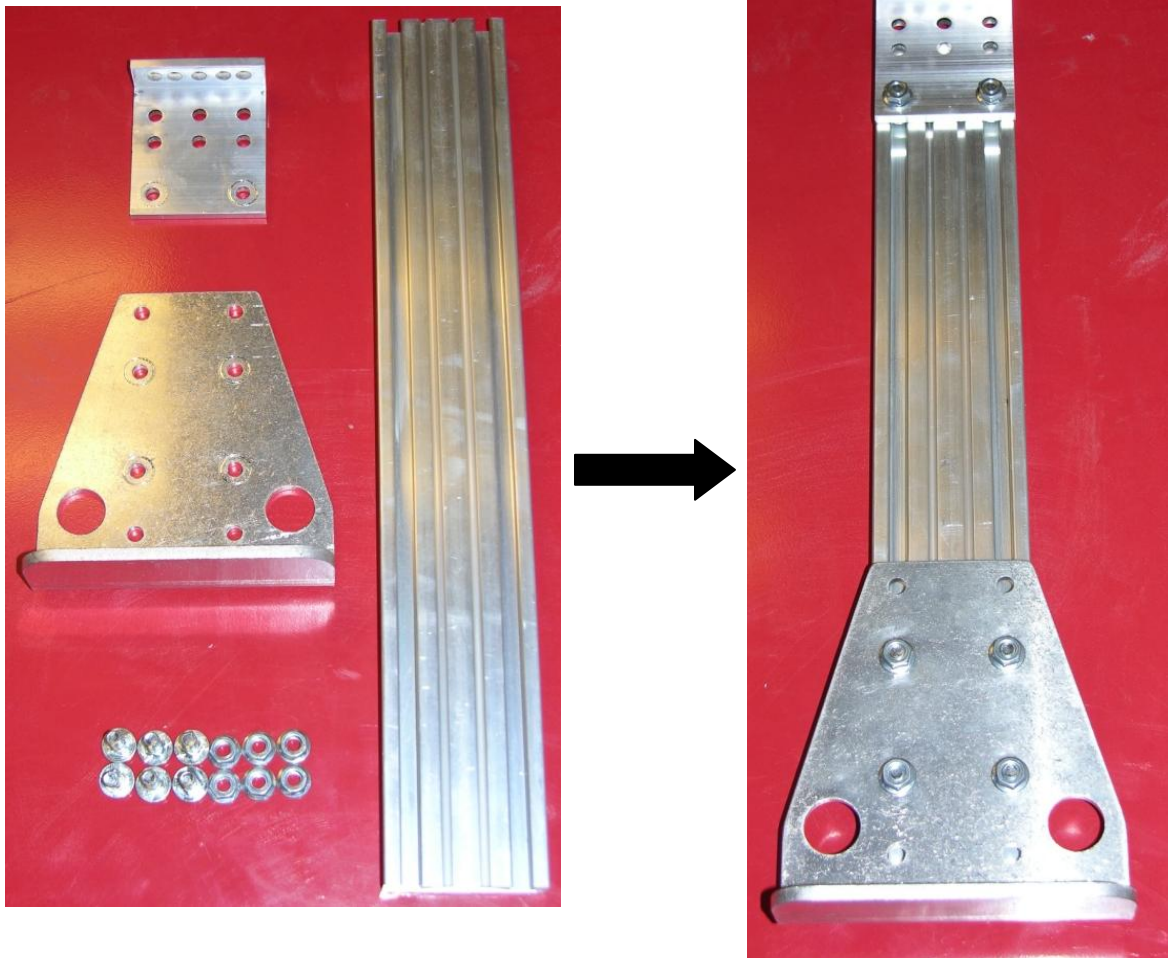

3. Slide (2X) Carriage Head Bolts into the RAIL-CAPTURE near the top of truck's tail-gate. Install RAIL-ANGLE BRACKET onto carriage head bolts. Adjust LEG so that it sits directly underneath RAIL-CAPTURE. Install/tighten all SERRATED FLANGE NUTS on RAIL-ANGLE BRACKET once LEG is positioned:



4. Tighten (4X) SERRATED FLANGE NUTS on FOOT BRACKET, use (2X) self tapping TEK screws to fasten FOOT to bed:

